




Start

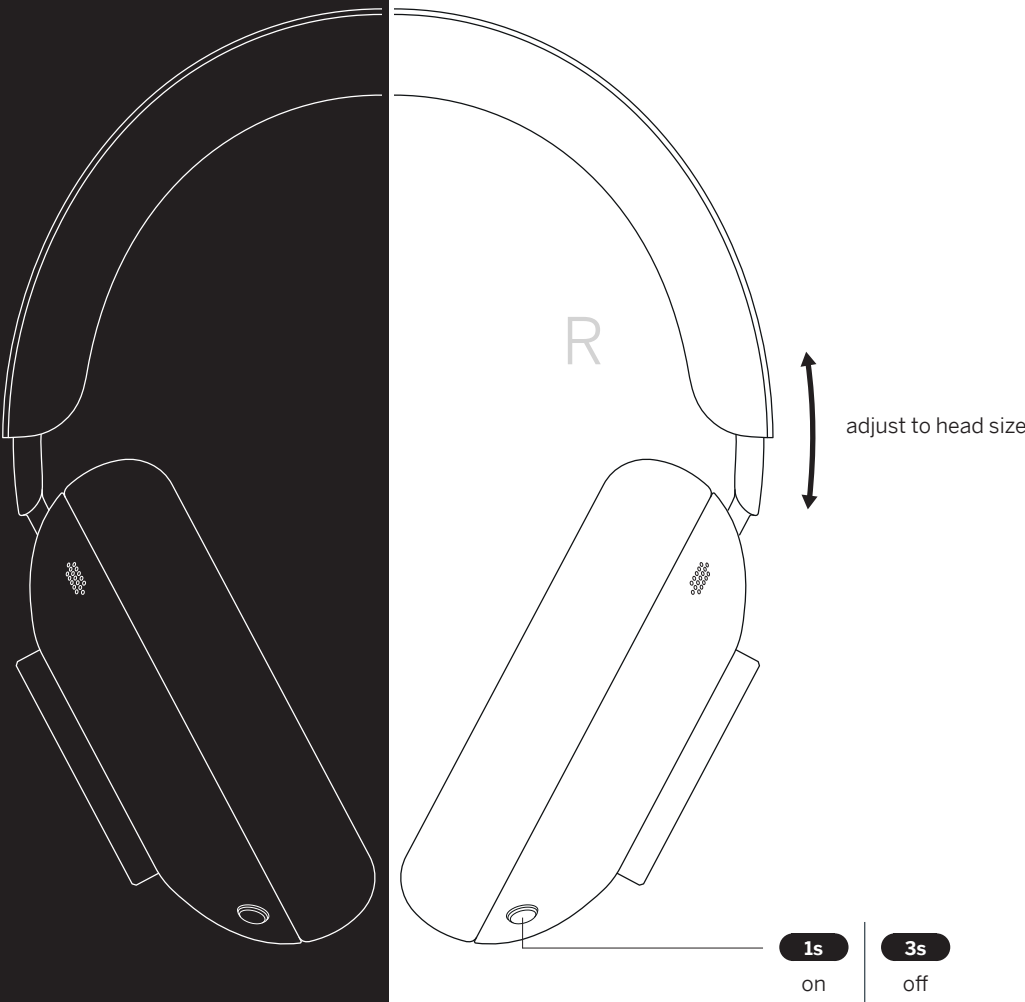


Connect

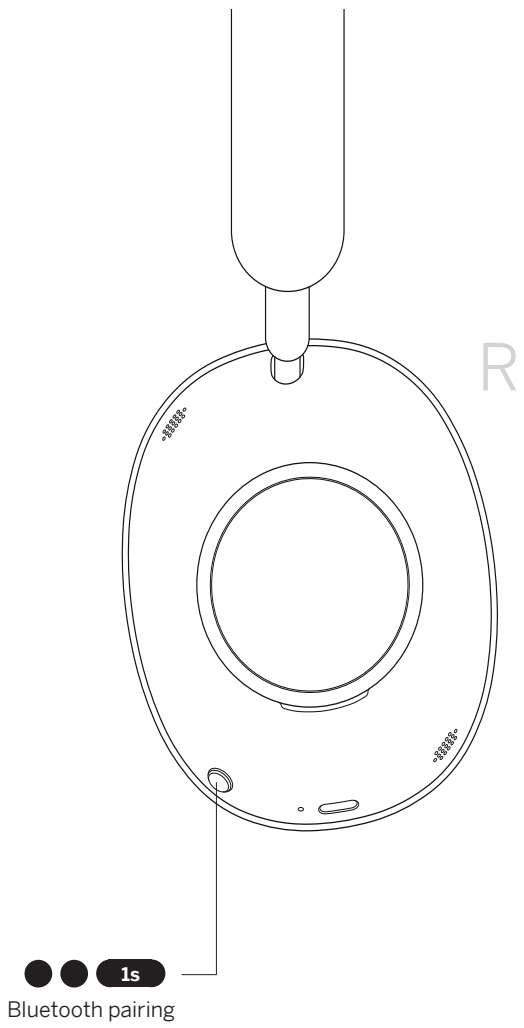


Audio control

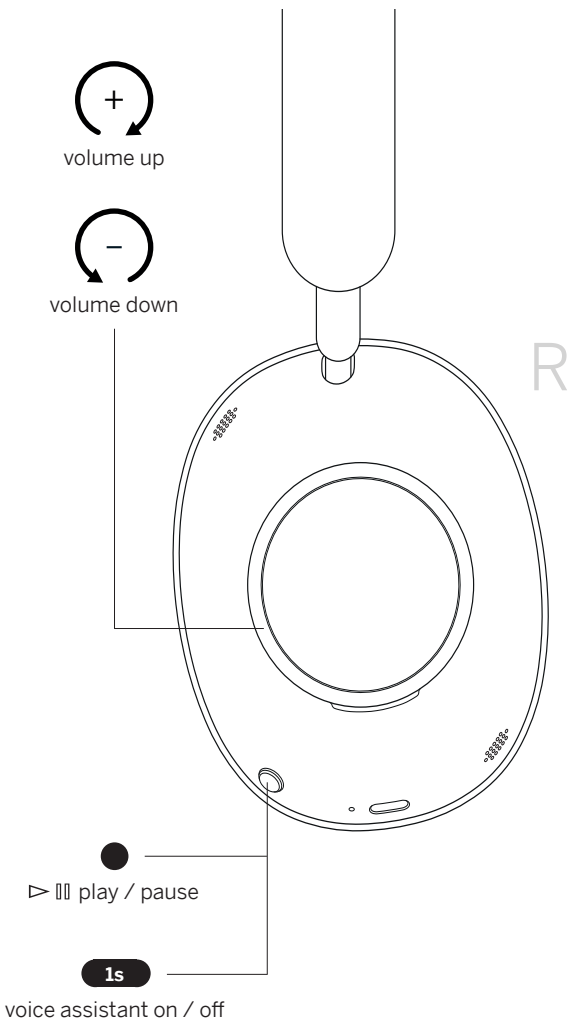


Scope of delivery

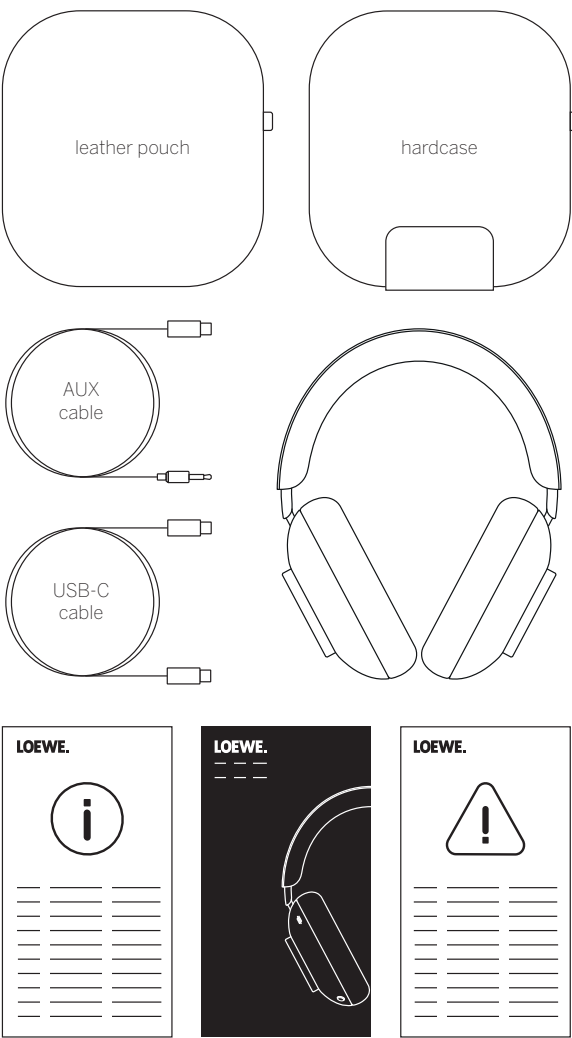

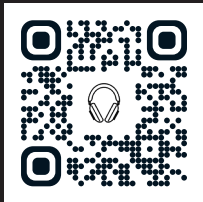

Start your setup journey

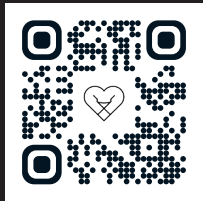

Download & discover Loewe leo

designed and
engineered by
Loewe


Loewe Technology GmbH
Customer Care Center
Industriestraße 11
96317 Kronach, Germany

Phone +49 9261 99-500
E-mail ccc@loewe.de


Edition 01
02/2026/PH




Audio navigation

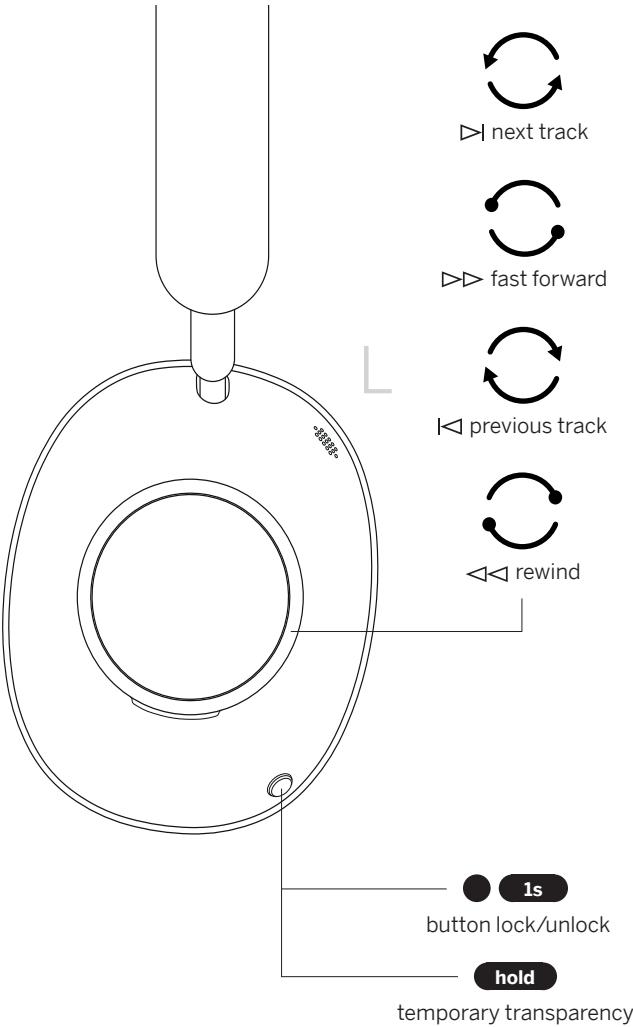

Ambience mode

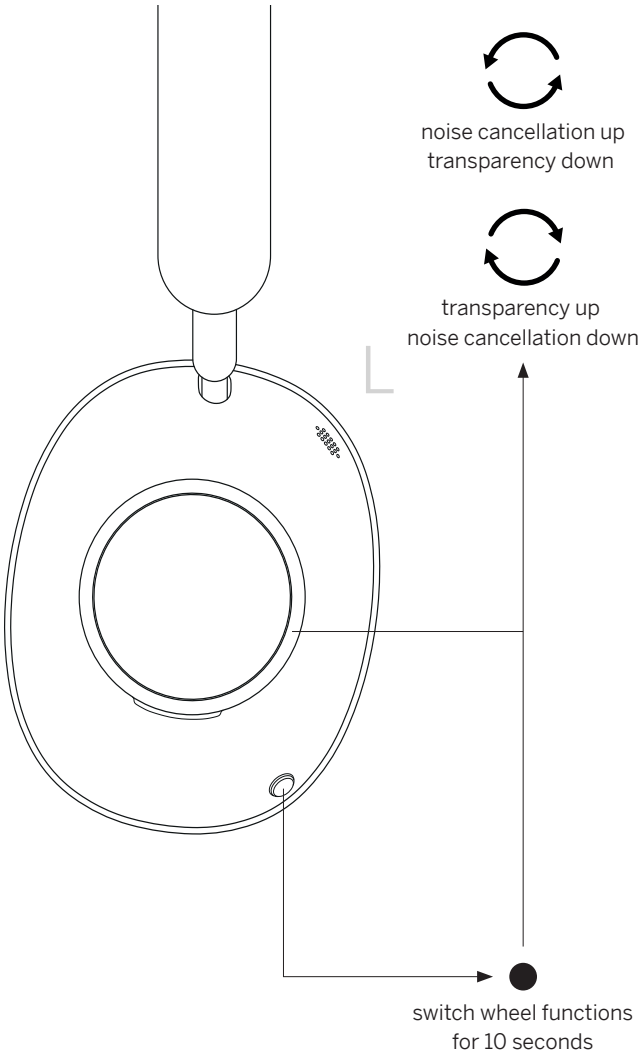

Call

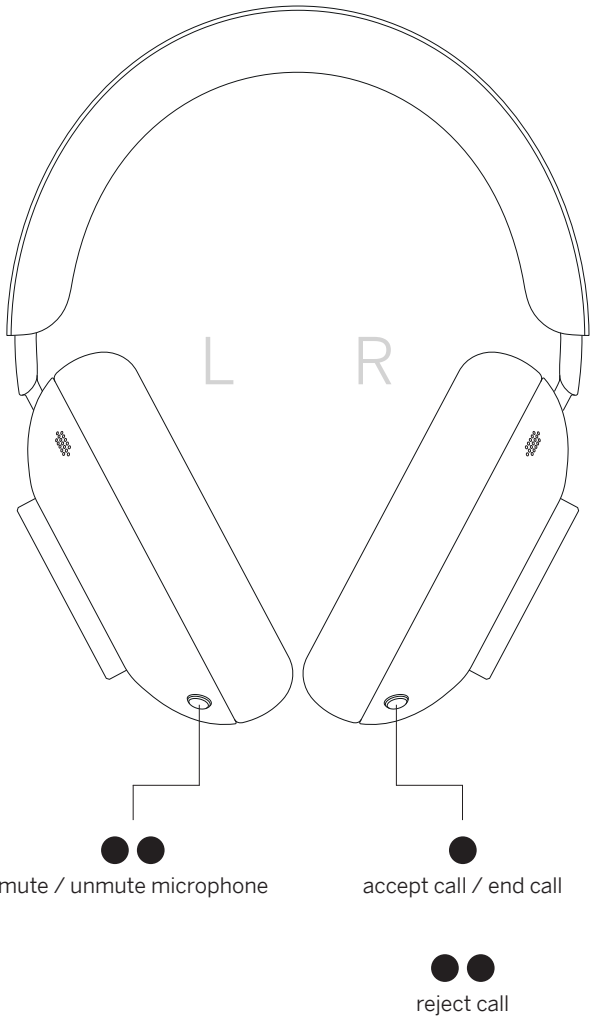

All preset functions

R	on		hold 1 sec.
	off		hold 3 sec.
	Bluetooth pairing		2x press & hold 1 sec.
	volume up / down		turn right wheel
	▶ play / pause		press
	voice assistant on / off		hold 1 sec.
	accept call / end call		press
	reject call		2x press
	hardware reset		hold 15 sec.
	factory reset		1. disconnect all BT devices 2. hold 6s, release after click
L	▶ next track		turn wheel forward
	▶▶ fast forward		turn & hold forward
	◀ previous track		turn wheel backward
	◀◀ rewind		turn & hold backward
	button lock/unlock		press & hold 1 sec.
	temporary transparency		hold to activate
	ambience mode		turn left wheel
	switch wheel functions		press
	mute / unmute microphone		2x press