



Flat Panel VMT

Installation Manual

EN

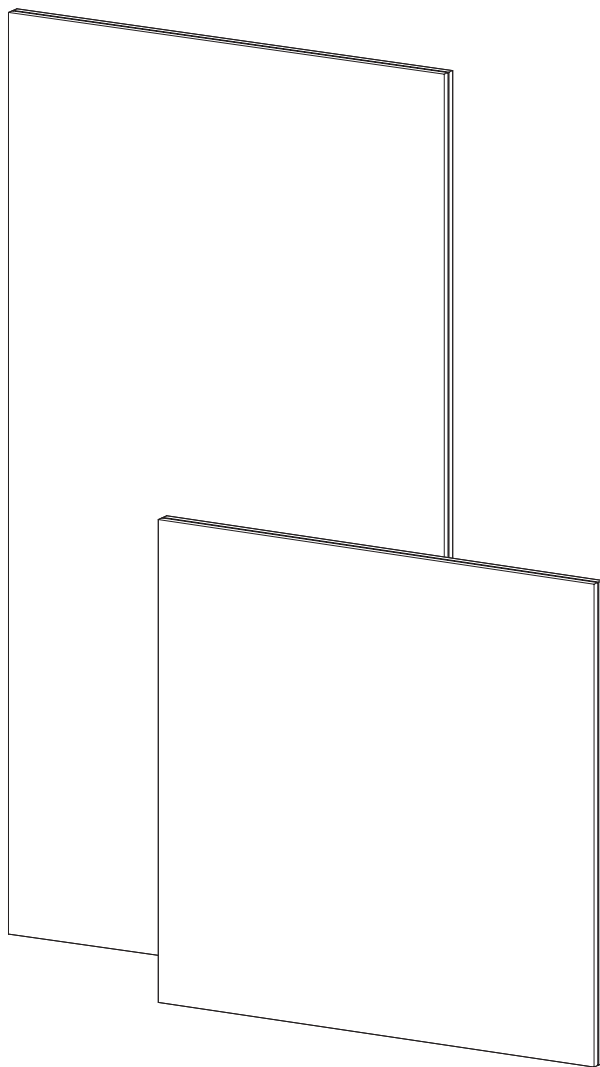

V//COUSTIC

MATERIAL NEEDED**Included**

Flat Panel VMT




Velcro Stripes

Not Included


Level



Measuring Tape



Box Cutter




Glue

Available formats





1190x595mm



595x595mm




Partial wall installation

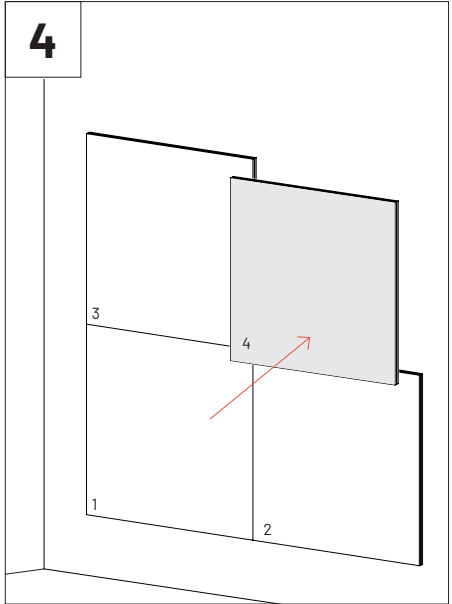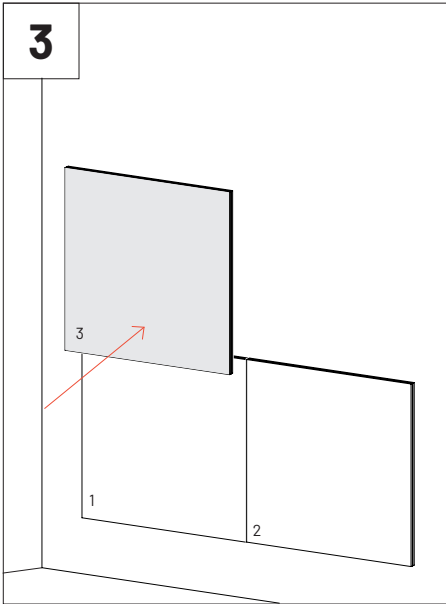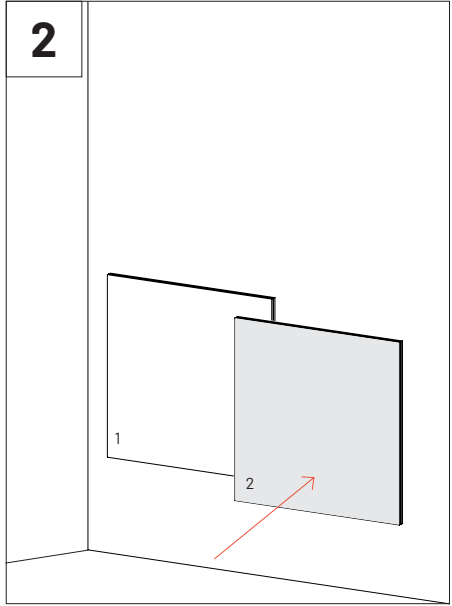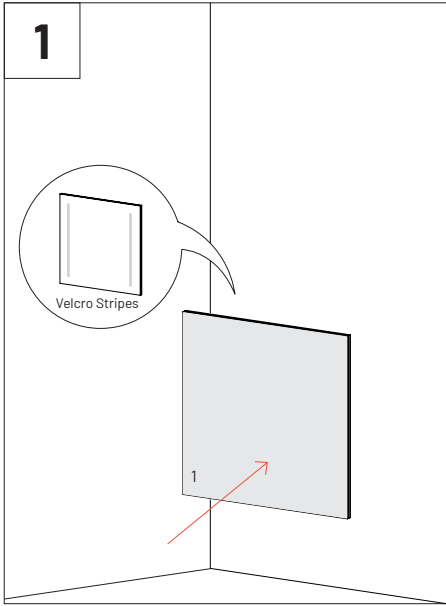


Full wall installation

1

Measure wall height in both sides. Take the smallest height.

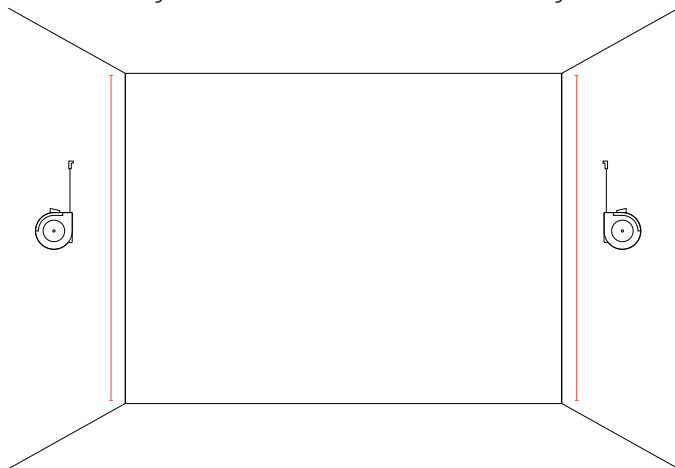
**2**

Based on the smallest height, calculate if it is necessary to cut one of the panels to fill the entire wall height. Check for continuity between panels before cutting.

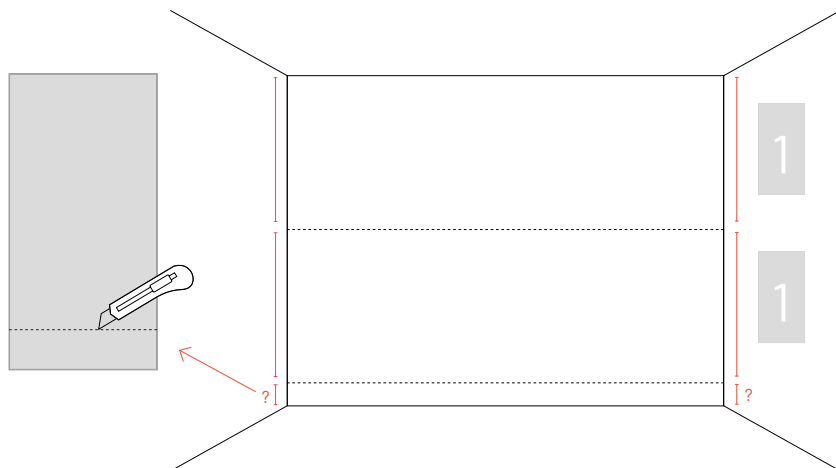


3

Glue the Velcro tape in the wall. It is recommended to use 2 stripes of Velcro per panel (included). You can also glue the panels directly to the wall with Flexi Glue Ultra

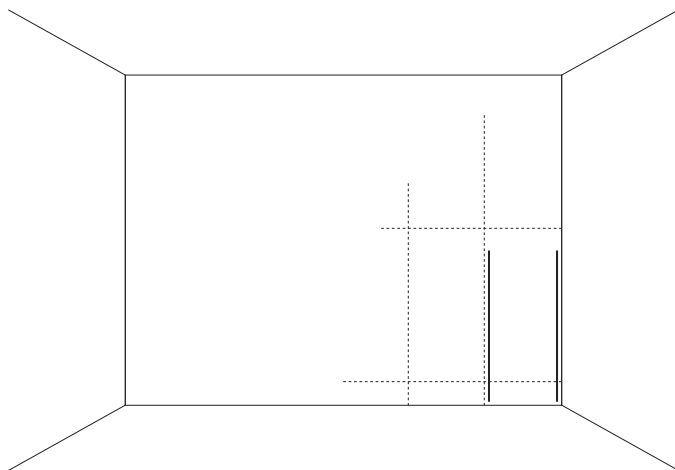
**4**

Start the installation from the bottom-right side (If cuted panels are going to be used it is recommended to start with these). Check if panels are leveled before proceeding to next row.

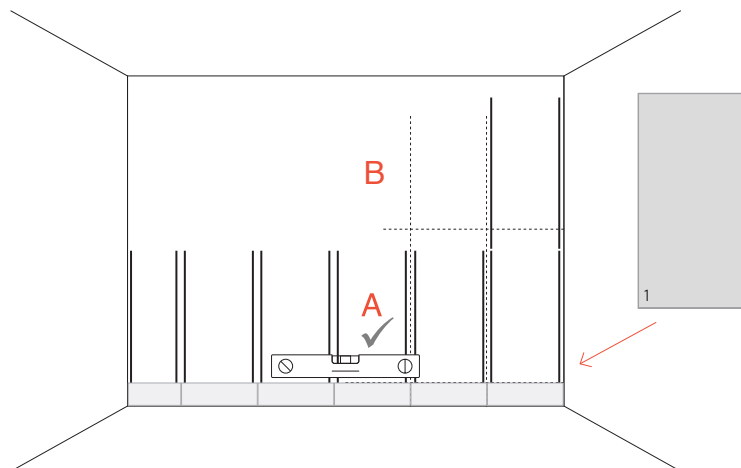


5

Install the remaining panels.

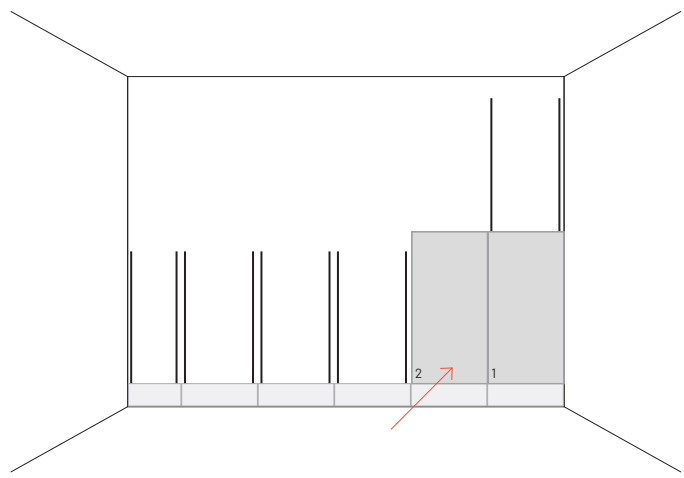

6

VMT boards can be installed vertically or horizontally, depending on the pattern and desired orientation.

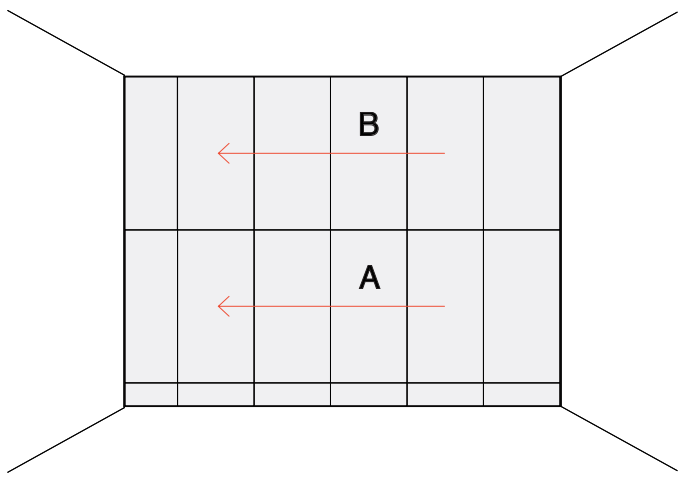



For the installation of Flat Panel VMT on the ceiling, we recommend using Flexi Glue Ultra.

Do not apply Flat Panel VMT behind radiators or too close to a heat source.

Main Office, R&D & Logistics

Avenida do Pólo 3, N.º 159, Carvalhosa
4590-137 Paços de Ferreira, Portugal

Office

Rua Quinta do Bom Retiro N.º 16, Armazém 9
2820-690 Charneca da Caparica, Portugal
T (+351) 212 964 100

Info and Sales

E sales@vicoustic.com

www.vicoustic.com



© Vicoustic, 2021 | V6

No parts of this document might be copied and/or published without written consent of Vicoustic.